Products: 1000080, 1000081





Manufactured from Glass Fiber Reinforced Concrete (GFRC) for extreme durability, Half Log Benches are a very popular option. Themed to fit into your natural surroundings, this bench is a great choice for playgrounds, malls, and streetscapes.



Half Log Bench 1000080 - 4' L: 4'-0" x W: 1'-7" x H: 1'-6" 530 LBS



**1000081 - 6'** L: 6'-0" x W: 1'-7" x H: 1'-6" 680 LBS

Half Log Bench



- Realistic Texture
- Blends into natural environment


Dimensions and weights are approximate ~Heights shown from top of surfacing ~


5121 Winnetka Ave N • Suite 108 New Hope, MN 55428 612.670.8195 info@cre8play.com cre8play.com



Products: 1000080, 1000081

### Installation Instructions

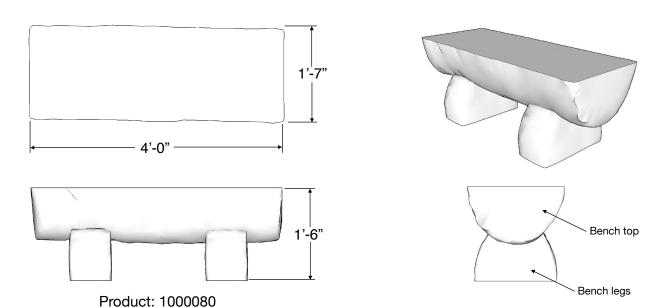

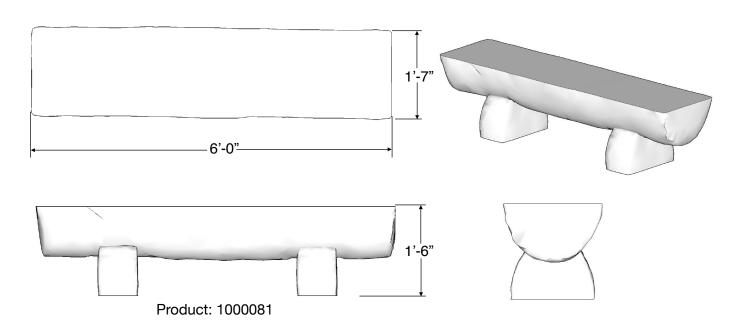

### **Included Items:**

moradea items.					
Item	Description	Quantity			
Half Log Bench top	Site Amenity	1			
Half Log Bench legs	Site Amenity	2			
Anchor Bolt 1/2" x 3"	Mounting Hardware	4			


~ All dimensions are approximate ~


Last Revised 8/8/19



Products: 1000080, 1000081

### Installation Instructions

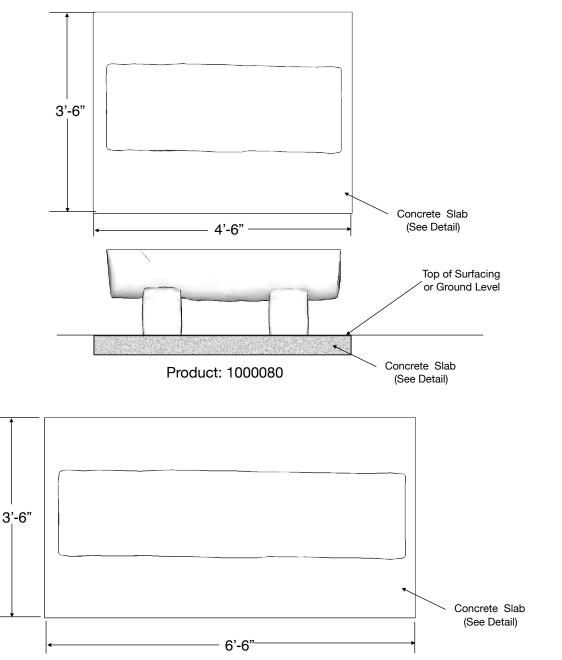

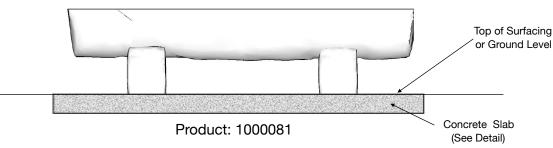

~ All dimensions are approximate ~

Last Revised 8/8/19

5121 Winnetka Ave N • Suite 108 New Hope, MN 55428 612.670.8195 info@cre8play.com cre8play.com



# =re8pley

### Half Log Bench

Products: 1000080, 1000081

### Installation Instructions


### NOTE: Read installation instructions thoroughly before starting installation process.

**Step 1:** Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes.

**Step 2:** Pour a concrete base for the Half Log Bench. Refer to the typical slab detail. The concrete should be flush with the ground level. Allow time for the concrete to completely cure before continuing.

**Step 3:** Place legs on the ground in the appropriate final location and dry fit the bench top on the legs. Adjust as needed. See the hardware recommendation page for information on anchoring equipment down to your slab, then bolt down the legs.

**Step 4:** Remove bench top. Apply Loctite PL 500 landscape block adhesive (or similar) on top of legs, and replace bench top.

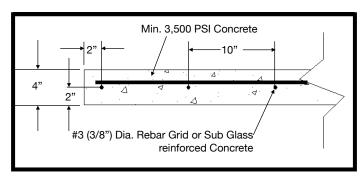

Typical 4" Concrete Slab Section Check local soil conditions. (Not to Scale)

#### NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the site amenity.
- Check local codes and requirements prior to digging or installing any equipment.

cre8play.com



Products: 1000080, 1000081

### Installation Instructions


**Step 5:** Locate your anchor bolts, supplied by Cre8Play. Using the proper standard drill bit size noted in the installation table, drill the concrete to the appropriate hole depth (C).

**Step 6:** Insert the anchor bolt into the hole and tighten until the bolt is fully seated. Do NOT over tighten the anchor bolts.


#### **Installation Table**

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size)	Minimum Embedment	Hole Depth
Bit Diameter	Diameter (A)	B	©	
1/2" x 3"	7/16"	3/4"	2 1/2"	3 1/2"


Anchor Bolt (Large Diameter Tapcon) Installation:

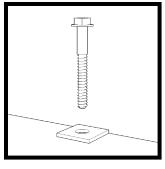


Mounting Detail (Not to Scale)

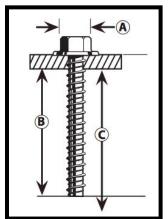

Step 1: Drill

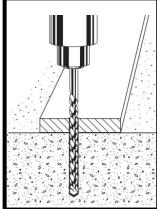

Step 2: Anchor

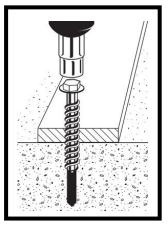

NOTE: Always wear eye protection appropriate to the task at hand.

cre8play.com